

INSTRUCTIONS FOR USE

Alpha XT
miniRITE T
miniRITE T R





WARNING: People younger than 18 should go to a doctor before using this.

People younger than 18 years old need specialized care, and using this without a medical evaluation may worsen impairment or disability.

A hearing aid user who is younger than 18 should have a recent medical evaluation from a doctor, preferably an ear-nose-throat doctor (an ENT). Before using this, a doctor should determine that the use of a hearing aid is appropriate.

WARNING to Hearing Aid Dispensers:

You should advise a prospective hearing aid user to consult promptly with a doctor, preferably an ear specialist such as an ENT, before dispensing a hearing aid if you determine through inquiry, actual observation, or review of any other

available information concerning the prospective user, that the prospective user has any of the following conditions:

- Visible deformity of the ear, either congenital or traumatic
- Fluid, pus, or blood coming out of the ear within the previous 6 months
- Pain or discomfort in the ear
- History of excessive ear wax or suspicion that something is in the ear canal
- Dizziness, either recent or long-standing
- Sudden, quickly worsening, or fluctuating hearing loss within the previous 6 months
- Hearing loss or ringing (tinnitus) only in one ear or a noticeable difference in hearing between ears
- Audiometric air-bone gap equal to or greater than 15 dB at 500 Hz, 1000 Hz, and 2000 Hz

**WARNING to Hearing Aid Dispenser,
Outputs over 132 dB SPL:**

You should exercise special care in selecting and fitting a hearing aid with a maximum output that exceeds 132 dB SPL because it may impair the remaining hearing of the hearing aid user.

Caution: This is not hearing protection.

You should remove this device if you experience overly loud sounds, whether short or long-lasting. If you're in a loud place, you should use the right kind of hearing protection instead of wearing this device. In general, if you would use ear plugs in a loud place, you should remove this device and use ear plugs.

Caution: The sound output should not be uncomfortable or painful.

You should turn down the volume or remove the device if the sound output is uncomfortably loud or painful. If you consistently need to turn the volume down, you may need to further adjust your device.

Caution: You might need medical help if a piece gets stuck in your ear.

If any part of your hearing aid, like the eartip, gets stuck in your ear, and you can't easily remove it with your fingers, get medical help as soon as you can. You should not try to use tweezers or cotton swabs because they can push the part farther into your ear, injuring your eardrum or ear canal, possibly seriously.

Note: What you might expect when you start using a hearing aid

A hearing aid can benefit many people with hearing loss. However, you should know it will not restore normal hearing, and you may still have some difficulty hearing over noise. Further, a hearing aid will not prevent or improve a medical condition that causes hearing loss.

People who start using hearing aids sometimes need a few weeks to get used to them. Similarly, many people find that training or counseling can help them get more out of their devices.



If you have hearing loss in both ears, you might get more out of using hearing aids in both, especially in situations that make you tired from listening –for example, noisy environments.

Note: Tell FDA about Injuries, malfunctions, or other adverse events.

To report a problem involving your hearing aid, you should submit Information to FDA as soon as possible after the problem. FDA calls them “adverse events,” and they might include: skin irritation in your ear, injury from the device (like cuts or scratches, or burns from an overheated battery), pieces of the device getting stuck in your ear, suddenly worsening hearing loss from using the device, etc.

Instructions for reporting are available at <https://www.fda.gov/Safety/MedWatch>, or call 1-800-FDA-1088. You can also download a form to mail to FDA.

Note: Hearing loss in people younger than 18

- People younger than 18 should see a doctor first, preferably an ear-nose-throat doctor (an ENT), because they may have different needs than adults.
- The doctor will identify and treat medical conditions as appropriate.
- The doctor may refer the person to an audiologist for a separate test, a hearing aid evaluation.
- The hearing aid evaluation will help the audiologist select and fit the appropriate hearing aid.

A person who is younger than 18 years old with hearing loss should have a medical evaluation by a doctor, preferably an ENT, before buying a hearing aid. The purpose of a medical evaluation is to identify and treat medical conditions that may affect hearing but that a hearing aid won't treat on its own.

Following the medical evaluation and if appropriate, the doctor will provide a written statement that the hearing loss has been medically evaluated and the person is a candidate for a hearing aid. The doctor may refer the person to an audiologist for a hearing aid evaluation, which is different from the medical evaluation and is intended to identify the appropriate hearing aid.

The audiologist will conduct a hearing aid evaluation to assess the person's ability to hear with and without a hearing aid. This will enable the audiologist to select and fit a hearing aid for the person's individual needs. An audiologist can also provide evaluation and rehabilitation since, for people younger than 18, hearing loss may cause problems in language development and educational and social growth. An audiologist is qualified by training and experience to assist in the evaluation and rehabilitation of hearing loss in people younger than 18.

Model overview

This booklet is valid for the following hearing aid models:

- MNR T R
- MNR T

FW 1.1

- | | |
|--|---------------------------|
| <input type="checkbox"/> Bernafon Alpha XT 9 MNR T R | GTIN: (01) 05714464122912 |
| <input type="checkbox"/> Bernafon Alpha XT 7 MNR T R | GTIN: (01) 05714464122929 |
| <input type="checkbox"/> Bernafon Alpha XT 5 MNR T R | GTIN: (01) 05714464122936 |
| | |
| <input type="checkbox"/> Bernafon Alpha XT 9 MNR T | GTIN: (01) 05714464122912 |
| <input type="checkbox"/> Bernafon Alpha XT 7 MNR T | GTIN: (01) 05714464122929 |
| <input type="checkbox"/> Bernafon Alpha XT 5 MNR T | GTIN: (01) 05714464122936 |

FW 1.0

- | | |
|--|---------------------------|
| <input type="checkbox"/> Bernafon Alpha XT 9 MNR T R | GTIN: (01) 05714464097364 |
| <input type="checkbox"/> Bernafon Alpha XT 7 MNR T R | GTIN: (01) 05714464097371 |
| <input type="checkbox"/> Bernafon Alpha XT 5 MNR T R | GTIN: (01) 05714464097388 |
| | |
| <input type="checkbox"/> Bernafon Alpha XT 9 MNR T | GTIN: (01) 05714464097364 |
| <input type="checkbox"/> Bernafon Alpha XT 7 MNR T | GTIN: (01) 05714464097371 |
| <input type="checkbox"/> Bernafon Alpha XT 5 MNR T | GTIN: (01) 05714464097388 |

The following speakers are available for the above models:

- Speaker 60
- Speaker 85
- Speaker 100 (Power Instrument)
- Power receiver mold, speaker 100 (Power Instrument)
- Power receiver mold, speaker 105 (Power Instrument)
- MicroShell 60
- MicroShell 85

Introduction to this booklet

This booklet guides you on how to use and maintain your new hearing aids. Ensure you read this booklet carefully, including the **Warnings** section. This will help you get the most benefit from your hearing aids.



Warnings

Text marked with a warning symbol must be read before using the device.

Your hearing care professional has adjusted the hearing aids to meet your needs. If you have additional questions, contact your hearing care professional.

A hearing care professional* (hearing aid professional, audiologist, ENT (ear, nose and throat) doctor, and hearing aid dispenser) is a person who is appropriately trained and has proven competency in professionally assessing hearing, selecting, fitting, and delivering hearing instruments and rehabilitation care to persons with hearing loss. The hearing care professional has been trained in accordance with national or regional regulations.

*The job title may vary from country to country.

Intended use

| | |
|----------------------------|---|
| Intended use | The hearing aid is intended to amplify and transmit sound to the ear. |
| Indications for use | Bilateral or unilateral impaired hearing of sensorineural, conductive or mixed type ranging from a slight (16 dB HL*) to profound (95 dB HL*) degree of hearing loss, with an individual frequency configuration. |
| Intended user | Person with hearing loss using a hearing aid and their caregivers. Hearing care professional responsible for adjusting the hearing aid. |
| Intended user group | Adults and children older than 36 months. |
| Use environment | Indoor and outdoor. |
| Contraindications | Not suitable for infants below 36 months. Users of active implants must pay special attention when using the hearing aid. For more information read the Warnings section. |
| Clinical benefits | The hearing aid is designed to provide better speech understanding to help ease communication with the aim of improving quality of life. |

**As specified by the American Speech-Language-Hearing Association, asha.org, using pure-tone average of 0.5, 1 and 2 kHz.*

IMPORTANT NOTICE

The hearing aid amplification is uniquely adjusted and optimized to your personal hearing capabilities during the hearing aid fitting performed by your hearing care professional.

Table of contents

About

| | |
|--|----|
| Your hearing aid, speaker and earpiece | 15 |
|--|----|

Getting started

| | |
|---------------------------------------|----|
| Charging time | 18 |
| Battery performance | 19 |
| Identify left and right hearing aids | 20 |
| Turn hearing aids ON/OFF | 22 |
| Low battery indication | 26 |
| Replace disposable battery (size 312) | 28 |

Daily use

| | |
|-------------------------------|----|
| Put on hearing aid | 30 |
| Cleaning | 32 |
| Clean the hearing aid | 33 |
| Replace standard earpiece | 34 |
| ProWax miniFit filter | 35 |
| Replace ProWax miniFit filter | 36 |
| Clean customized earpiece | 37 |

| | | |
|-----------------|--|----|
| | Replace ProWax filter | 38 |
| | Adjust volume | 39 |
| | Change program | 40 |
| | Store your hearing aids | 42 |
| Options | | |
| | Flight mode | 44 |
| | Mute/unmute your hearing aids | 46 |
| | Use your hearing aids with iPhone, iPad and iPod | 48 |
| | Use your hearing aids with Android devices | 49 |
| | Pairing and compatibility | 50 |
| | Call handling | 51 |
| | Wireless accessories and other options | 52 |
| Tinnitus | | |
| | Tinnitus SoundSupport™ (optional) | 54 |
| | Guidelines for Tinnitus SoundSupport users | 55 |
| | Sound options and volume adjustments | 56 |
| | Limitation on use time | 58 |
| | Warnings related to tinnitus | 61 |

Continues on next page

Table of contents


Warnings

| | |
|------------------|----|
| General warnings | 62 |
|------------------|----|

More info


| | |
|--------------------------------------|----|
| Troubleshooting | 68 |
| Water and dust resistant (IP68) | 72 |
| Operating conditions | 73 |
| Technical information | 75 |
| Cell phone | 78 |
| Warranty | 85 |
| Your individual hearing aid settings | 86 |
| Sound and LED light indicators | 89 |
| Summary of relevant studies | 94 |
| Technical Data | 96 |

Your hearing aid, speaker and earpiece

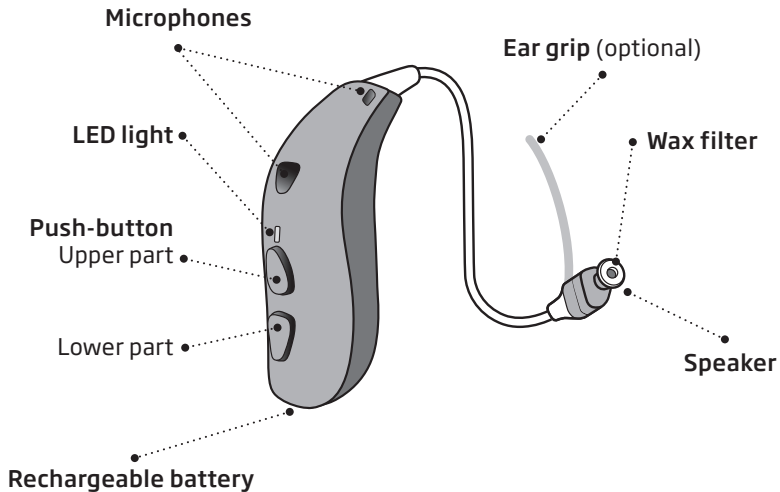


The hearing aids use one of the following speakers:

Standard speakers

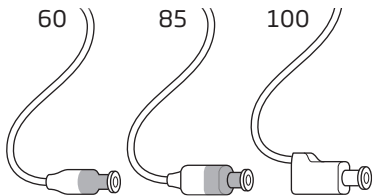

Customized speakers

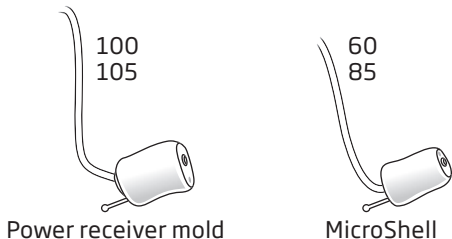

The speakers use one of the following earpieces:

Standard earpieces



OpenBass dome



Bass dome, double vent



Power dome



Grip Tip

Available in small and large, left and right, with or without vent.

Customized earpieces



LiteTip



MicroMold



 
OtoTherm™ LiteTip



OtoTherm MicroMold

OtoTherm is a registered trademark of Demant.

Dome sizes



*Only as OpenBass dome for speaker 60

Note

For details on replacing the dome, see the **Replace standard earpieces** section.

Charging time

Ensure you fully charge your hearing aids before first use and charge them every night. In this way, you ensure that you start your day with fully charged hearing aids.

If your hearing aid's battery is completely drained, the normal charging time is:

| 3 hours | 1 hour | 0.5 hour |
|----------------|---------------|-----------------|
| Fully charged | 50% charged | 25% charged |

When the battery is fully charged, the charging process stops automatically.

Charging time may vary depending on the remaining capacity of the battery and between the left/right hearing aid.

For instructions on how to use your charger, see the charger's instructions for use.

Battery performance

The battery performance varies depending on your individual use and hearing aid settings. Streaming sound from a TV, mobile phone or connectivity devices can influence this performance.

Rechargeable battery – MNR T R only

If your rechargeable hearing aids do not perform for a full day, contact your hearing care professional.

If your hearing aids run out of battery, ensure you recharge them by placing them in the charger.

Be aware that restarting the hearing aids does not give you more usage time.

Identify left and right hearing aids


It is important to distinguish between the left and the right hearing aid, as they may be programmed differently.

Color indicators mark the left and right hearing aids. A **RED** indicator marks the **RIGHT** hearing aid. A **BLUE** indicator marks the **LEFT** hearing aid.


You can find color indicators on the hearing aid itself and on 60 and 85 speakers as shown. They can also be found on 100 speakers and customized earpieces.

For 105 speakers, the color indicator is found on the earpiece.

MNR T R

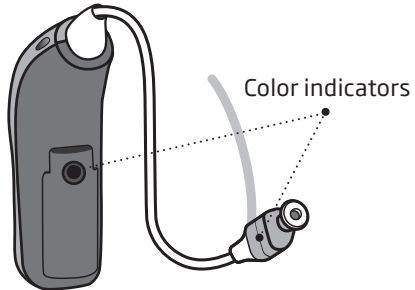

MNR T

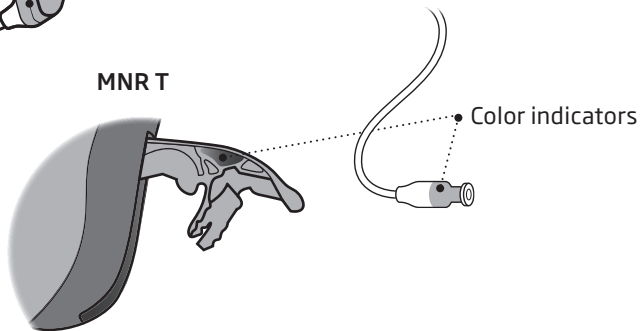

Turn hearing aids ON/OFF

Using the charger

Your hearing aids automatically turn ON when removed from the charger.*

The hearing aid LED light turns **GREEN** after a few seconds. Wait until the hearing aid LED light blinks **GREEN** twice, confirming that it is ready for use. Depending on your hearing aid settings, you may also hear a start-up jingle.

Your hearing aid automatically turns OFF and starts charging when placed in the charger. The hearing aid LED light turns **ORANGE**.


* If the charger is disconnected from power or runs out of battery while charging your hearing aids, your hearing aids may turn OFF to save power. If your hearing aids do not automatically turn ON when removed from the charger, turn them on manually using the push-button.

IMPORTANT NOTICE

If applicable, ensure that your charger is powered or that the charger's built-in battery is charged when the hearing aid is placed in the charging port. For more information, see your charger's instructions for use.

Using the push-button - MNR T R only

Your hearing aids can be turned ON/OFF using the push-button.

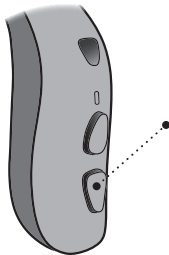

To turn ON

Press and hold the lower part of the push-button for approximately two seconds until the hearing aid LED light turns **GREEN**.

Release the push-button and wait until the hearing aid LED light blinks **GREEN** twice.

The hearing aid is now turned ON.

To turn OFF

Press and hold the lower part of the push-button for approximately three seconds until the hearing aid LED light turns **ORANGE**. The hearing aid plays four descending tones. Release the push-button and the hearing aid is turned OFF.

For information regarding tones, see the **Sound and LED light indicators** section.

Using the battery drawer - MNR T only


The battery drawer is used to turn the hearing aids ON and OFF. Depending on your hearing aid settings, you may also hear a start-up jingle.

LED light

Three green blinks indicate that the hearing aid is turned on.


Turn ON

Close the battery drawer with the battery in place.

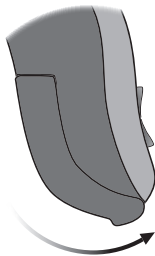

Turn OFF

Open the battery drawer.

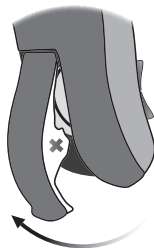

To save battery life, make sure your hearing aids are switched OFF when you are not wearing them. To perform a quick reset of hearing aid settings, open and close the battery drawer.

 
Low battery indication

Your hearing aids indicate when the battery is running low either by playing three alternate tones or Spoken indicators (optional) in selected languages. The indication is repeated periodically until the battery runs out. Your hearing care professional can set your hearing aids to match your preferences. To extend battery performance, ensure you stop any audio streaming.

- MNR T R: Your hearing aid will indicate that the battery is running low. At this point, you may continue to stream audio for approximately one hour.
- MNR T: Your hearing aid will indicate that the battery is running low. This gives you approximately 15 minutes before the hearing aid runs out of battery. At this point, Bluetooth® connectivity is turned OFF.


Just before the battery runs out completely, you hear four descending tones.

The battery is running low



Three alternate tones

 The battery has run out



Four descending tones



Spoken Indicators


Hearing aid LED light

Continuous **ORANGE** blinks indicate low battery.

Replace disposable battery (size 312)


(MNR T only)

1. Remove

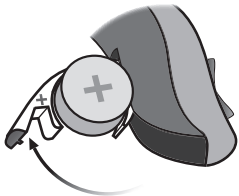

Fully open the battery drawer and remove the battery.


2. Uncover

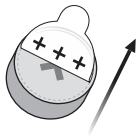

Remove the sticky label from the + side of the new battery.

Tip:
Wait 2 minutes so that the battery can draw air, to ensure optimal functioning.


3. Insert

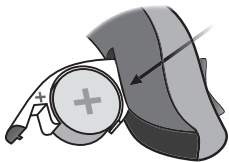

Insert the new battery into the battery drawer. Insert it from above, NOT from the side.


Ensure that the + side of the battery and battery drawer align.

4. Close

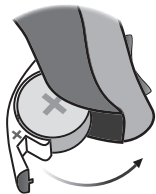

Close the battery drawer.
You may hear a jingle through the
earpiece.

Tip

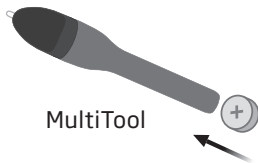

You can use the MultiTool to change
the battery. Use the magnetic end to
remove and insert batteries.

Put on hearing aid

Step 1




Place the hearing aid behind your ear.

You should always use the speaker with an earpiece attached.

Use only parts designed for your hearing aid.


Step 2

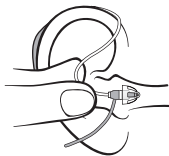

Hold the bend of the speaker wire between your thumb and index finger.

The earpiece should point towards the opening of the ear canal.

Step 3

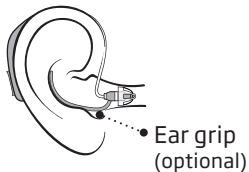


Gently push the earpiece into your ear canal until the speaker wire sits close to your head.

If the speaker has an ear grip, place it in the ear so it follows the contour of the ear.

Cleaning

The MultiTool contains a brush and wire loop for cleaning and removing earwax. If you need a new MultiTool, contact your hearing care professional.

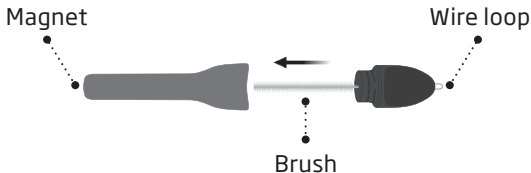

IMPORTANT NOTICE

The MultiTool has a built-in magnet. Keep the MultiTool at least 30 centimeters (1 foot) away from credit cards and other magnetically-sensitive devices.


Clean the hearing aid

When handling the hearing aid, hold it over a soft surface to avoid damage in case you drop it.

Clean the microphone openings

Use the brush of the MultiTool to carefully brush debris away from the openings and the surface around the openings.

Ensure that you do not forcefully squeeze parts of the MultiTool into the microphone openings. This may damage the hearing aid.

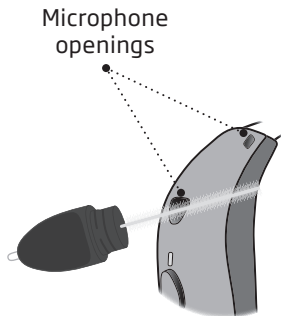


IMPORTANT NOTICE

To clean the hearing aids, use a soft, dry cloth. The hearing aids must never be washed or immersed in water or other liquids.

Replace standard earpiece


The standard earpiece (dome or Grip Tip) should not be cleaned. If the earpiece is filled with earwax, replace it with a new one. Grip Tips should be replaced at least once a month.

Step 1

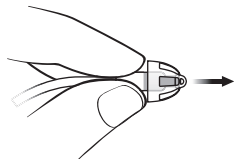


Hold on to the speaker and pull off the earpiece.

Step 2

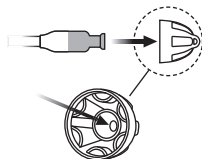

Insert the speaker exactly into the middle of the earpiece to get a secure fit.

Step 3

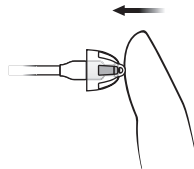


Push firmly to ensure that the earpiece is securely fastened.

ProWax miniFit filter

The speaker has a white wax filter attached to the end where the earpiece is attached. The wax filter keeps earwax and debris from damaging the speaker.

Ensure you replace the filter when clogged, or if the hearing aid does not sound normal. Alternatively, contact your hearing care professional. Ensure you remove the earpiece from the speaker before replacing the wax filter. To do this, see the **Replace standard earpieces** section.

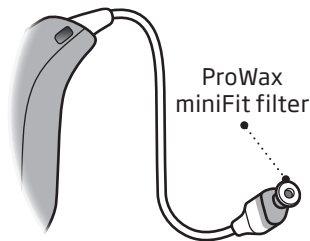


IMPORTANT NOTICE

Ensure you always use the same type of wax filter as originally supplied with the hearing aids. If you are in doubt about the use or replacement of wax filters, contact your hearing care professional.


Replace ProWax miniFit filter

1. Tool

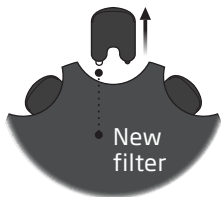


Remove the tool from the shell. The tool has two pins: one empty for removal and one with the new wax filter.

2. Remove

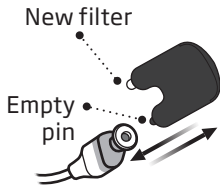

Insert the empty pin into the wax filter in the speaker and pull it out.

3. Insert

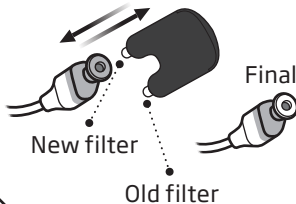

Insert the new wax filter using the other pin. Remove the tool and throw it out.

Note

If you use a mold or LiteTip, your hearing care professional must replace the wax filter in the speaker.

Clean customized earpiece

The earpiece should be cleaned regularly.

The earpiece has a white wax filter* that keeps earwax and debris from damaging the speaker. Ensure you replace the filter when clogged, or if the hearing aid does not sound normal.


Alternatively, contact your hearing care professional.

Note

If you use a mold or LiteTip, your hearing care professional must replace the wax filter in the speaker.

* OtoTherm MicroMold and LiteTip do not have a wax filter.

- Clean the vent by inserting the brush through the hole, twisting it slightly.

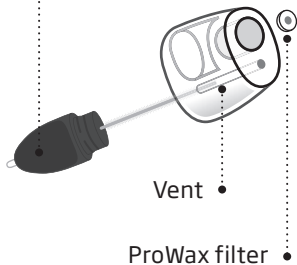


IMPORTANT NOTICE

If the earpiece is not on the speaker when removed from the ear, the earpiece may still be in the ear canal. For further instructions, consult your hearing care professional.


Replace ProWax filter

1. Tool

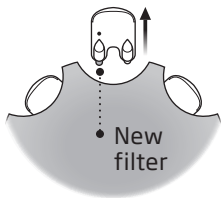


Remove the tool from the shell. The tool has two pins: one empty for removal and one with the new wax filter.

2. Remove

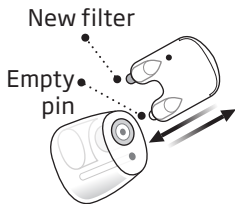

Insert the empty pin into the wax filter in the earpiece and pull it out.

3. Insert

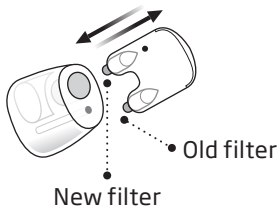


Insert the new wax filter into the wax filter in the earpiece using the other pin. Remove the tool, and throw it out.

Adjust volume


The push-button allows you to adjust the volume. When you increase or decrease the volume, you hear a beep.

For information regarding button press times, see the table **General settings overview for your hearing aid, in the Your individual hearing aid settings** section at the end of this booklet.

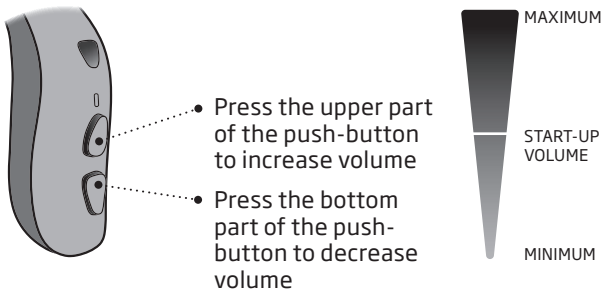

Change program

 Your hearing aid can have up to four different programs. These are programmed by your hearing care professional. You will hear one to four tones when you change program depending on the program.



- Press the push-button to switch between programs.

The program cycle switches one program forward when the upper part of the push-button is pressed, for example program 1 to 2 or program 4 to 1.

If the lower part of the push-button is pressed, the program cycle goes backward, for example 2 to 1 or program 1 to 4.

For information regarding tones, see the **Sound and LED light indicators** section.

For information regarding button press times see the table **General settings overview for your hearing aid**, in the **Your individual hearing aid settings** section at the end of this booklet.

Store your hearing aids

(MNR T R only)

When you are not using your hearing aids, the charger is the best place to keep them.

To ensure the longest life of the rechargeable battery in your hearing aids, do not expose them to excessive heat. For example, do not leave your hearing aids in the sun in front of a window or in a car, even if they are in the charger.

Long-term storage

 
Before you put away or store your hearing aids for a prolonged period of time (more than 14 days), ensure you first fully charge them, and then turn them OFF. This way the battery can be charged again.

Note

To protect the rechargeable battery, it is necessary that you fully charge the hearing aid every six months. If a stored hearing aid is not charged within a six month period, the rechargeable battery must be replaced.

Flight mode

When Flight mode is activated, Bluetooth® connectivity is turned OFF. However, your hearing aids are still turned ON and functioning. Be aware that pressing the push-button on one hearing aid activates Flight mode on both hearing aids. For information about sounds and lights, see the **Sound and LED light indicators** section.



- **To activate and deactivate**

Press and hold the lower part of the push-button for approximately seven seconds.

Four descending tones, a jingle and an LED light pattern confirm your action.

 
To activate and deactivate

Press and hold either part of the push-button for approximately seven seconds.

A jingle and an LED light pattern confirm your action.

Opening and closing the battery drawer also deactivates Flight mode.

MNR T



Mute/unmute your hearing aids

You can mute your hearing aids by using one of the following optional app and devices:

- Bernafon App
- SoundClip-A
- RC-A

How to unmute your hearing aids

You can unmute your hearing aids by using one of the optional app and devices or by applying a short press to the upper or lower part of the push-button on the hearing aids.

MNR T only

You can also mute your hearing aids by pressing either part of the push-button for approximately four seconds.

IMPORTANT NOTICE

Do not use the mute function as an OFF button, as the hearing aid is still using battery power in this mode.

Use your hearing aids with iPhone, iPad and iPod

Your hearing aids are Made for iPhone® hearing aids and allow for direct streaming from select iPhone®, iPad® or iPod touch®.

Bernafon App can be used to control your hearing aids from your mobile device.*

Additionally, your hearing aids offer hands-free communication with compatible iPhone and iPad devices.*

For assistance in using your hearing aids with any of these products, contact your hearing care professional.

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Use your hearing aids with Android devices

Your hearing aids support Audio Streaming for Hearing Aids (ASHA) and allow for direct streaming from select Android™ devices.*

Bernafon App can be used to control your hearing aids from your mobile device.*

For assistance in using your hearing aid with Android devices, contact your hearing care professional.

* For a list of compatible iPhone, iPad, iPod touch and Android devices, visit:
<https://www.bernafon.us/support/compatibility-guide>

Pairing and compatibility

For instructions on how to pair your hearing aids with iPhone, iPad, iPod touch or Android devices, visit:

 
<https://www.bernafon.us/support/pairing>

For a list of compatible iPhone, iPad, iPod touch and Android devices, visit:

<https://www.bernafon.us/support/compatibility-guide>

Call handling

You can answer, reject or end phone calls with the push-buttons on your hearing aids. For this functionality, your hearing aids must be paired with a compatible iPhone.*



- **To accept**

Press briefly on either part of the push-button to accept a phone call. A short tone confirms your action.

To reject

Press and hold on either part of the push-button to reject a phone call. Short, descending tones confirm your action.

To end

Press and hold on either part of the push-button to end a phone call. Short, descending tones confirm your action.

* For a list of compatible iPhones, visit: <https://www.bernafon.us/support/compatibility-guide>.

Wireless accessories and other options

There are a range of accessories available as enhancements to your wireless hearing aids. These enable you to hear and communicate better in everyday situations.

SoundClip-A

A device that can be used as remote microphone and hands-free headset when paired to your cell phone.

TV-A

A device that streams sound from a TV or electronic audio device to your hearing aids.

RC-A

A device that lets you change program, adjust volume, or mute your hearing aids.

EduMic

A device that can be used as a remote microphone in classrooms, work environments, public places (using Telecoil), and other settings.

Bernafon App

An application that gives you wireless access to your hearing aids through a mobile device for control of functionality, and that allows your hearing aids to be updated remotely. For iPhone, iPad, iPod touch and Android devices. Ensure that you only download Bernafon App from the official app stores.

Apple, the Apple logo, iPhone, iPad, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android, Google Play, and the Google Play logo are trademarks of Google LLC.

Telecoil

Telecoil can help you hear better when using a phone with a built-in loop or when in buildings with teleloop systems such as theaters, places of worship, or lecture rooms. This symbol is shown wherever a teleloop has been installed.



Tinnitus SoundSupport™ (optional)

Intended use of Tinnitus SoundSupport

Tinnitus SoundSupport is a tool intended to generate sounds to provide temporary relief for patients suffering from tinnitus as part of a tinnitus management program.

The target population is the adult population over 18 years of age.

Tinnitus SoundSupport is targeted to licensed hearing care professionals (audiologists, hearing aid specialists, or otolaryngologists) who are familiar with the evaluation and treatment of tinnitus and hearing loss. Tinnitus SoundSupport must be fitted by a hearing care professional participating in a tinnitus management program.

Guidelines for Tinnitus SoundSupport users

These instructions contain information about Tinnitus SoundSupport, which may have been enabled in your hearing aids by your hearing care professional.

Tinnitus SoundSupport is a tinnitus management device intended to generate sound of sufficient intensity and bandwidth to help manage tinnitus.

Your hearing care professional will also be able to offer the appropriate follow-up care. It is important to follow his/her advice and directions regarding such care.

Prescription use only

Good health practice requires that a person reporting tinnitus have a medical evaluation by a licensed ear physician before using a sound generator. The purpose of such an evaluation is to ensure that any medically treatable condition that may cause tinnitus is identified and treated prior to using a sound generator.

Sound options and volume adjustments

Tinnitus SoundSupport is programmed by your hearing care professional to match your hearing loss and preferences for tinnitus relief. It offers a number of different sound options. Together with your hearing care professional, you can select your preferred sound(s).

Tinnitus SoundSupport programs

Together with your hearing care professional, you decide which programs you may want to have Tinnitus SoundSupport activated for. The sound generator can be activated in up to four different programs.

Mute

If you are in a program for which Tinnitus SoundSupport is activated, the mute functionality only mutes the environmental sounds, and not the sound from Tinnitus SoundSupport. For information on how to mute your hearing aids, see the **Mute your hearing aids** section.

Volume adjustments with Tinnitus SoundSupport

When you select a hearing aid program for which Tinnitus SoundSupport is activated, your hearing care professional can only set the push-button on your hearing aid to work as a volume control for the tinnitus relief sound.

Your hearing care professional sets the volume control for the sound generator in one of two ways:

- A) Adjust volume in each ear separately, or
- B) Adjust volume in both ears simultaneously.

For more information about volume adjustments with Tinnitus SoundSupport, see the table **Tinnitus SoundSupport settings overview for your hearing aid** in the **Your individual hearing aid settings** section at the end of this booklet.

Limitation on use time

Daily use

The volume levels of Tinnitus SoundSupport can be set to a level which could lead to permanent hearing damage when used for a prolonged period of time. Your hearing care professional will advise you of the maximum amount of time per day you should use Tinnitus SoundSupport. It should never be used at uncomfortable levels.

See the table **Tinnitus SoundSupport: Limitation on use** in the **Your individual hearing aid settings** section at the end of this booklet to learn how many hours per day you can safely use the relief sound in your hearing aid.

Important information for hearing care professionals about Tinnitus SoundSupport

Device description

Tinnitus SoundSupport is a module function that can be enabled in the hearing aids by the hearing care professional.

Maximum wearing time

The wearing time of Tinnitus SoundSupport will decrease as you increase the level above 80 dB(A) SPL. The fitting software automatically displays a warning when the hearing aid exceeds 80 dB(A) SPL. See **Max wearing time indicator** next to the tinnitus fitting graph in the fitting software.

If the volume control is deactivated

By default the volume control for the sound generator is deactivated in the hearing aid. Risk of noise exposure increases when the volume control is activated.

If the volume control is activated

A warning may be displayed if you activate the tinnitus volume control in the **Buttons & Indicators** screen. This occurs if the relief sound can be listened to at levels that may cause hearing damage.

The **Max wearing time** table in the fitting software displays the number of hours the patient can safely use Tinnitus SoundSupport.

1. Note the max wearing time for each program for which Tinnitus SoundSupport is activated.
2. Write those values in the table **Tinnitus SoundSupport: Limitation on use**, in the back of this booklet.
3. Instruct your patient accordingly.

Warnings related to tinnitus

If your hearing care professional has activated the sound generator Tinnitus SoundSupport, please pay attention to the following warnings.

There are some potential concerns associated with the use of any sound generated by a tinnitus management device. Among them are the potential worsening of tinnitus, and/or a possible change in hearing thresholds.

Should you experience or notice a change in hearing or tinnitus, or any dizziness, nausea, headaches, heart palpitations, or possible skin irritation at the point of contact with the device, you should immediately discontinue use of the device and consult a medical, audiology, or other hearing care professional.

As with any device, misuse of the sound generator feature may cause potentially harmful effects. Care should be taken to prevent unauthorized use and to keep the device out of reach of children and pets.

Maximum wearing time

Always follow the maximum wearing time per day of the Tinnitus SoundSupport advised by your hearing care professional. Prolonged use may lead to worsening of your tinnitus or to hearing loss.

General warnings

For your personal safety and to ensure correct usage, you should familiarize yourself fully with the following general warnings before using your hearing aids.

Consult your hearing care professional if you experience unexpected operations or serious incidents with your hearing aids during use or because of its use. Your hearing care professional will support you with issue handling and, if relevant, reporting to the manufacturer and/or the national authorities.

Note that hearing aids do not restore normal hearing and do not prevent or improve a hearing impairment resulting from natural conditions. Hearing aids are only a part of hearing habilitation and may need to be supplemented by auditory training and instruction in lipreading. Furthermore, note that in most cases, infrequent use of hearing aids does not permit a user to attain full benefit from it.

(MNR T R only)

Only charge the hearing aids with a designated charger. Other chargers risk damaging the hearing aids and batteries.

This hearing aid is supported by a non-removable rechargeable lithium-ion battery cell. Please ensure that you charge the hearing aid and familiarize yourself with the safety and handling information related to rechargeable hearing aids.

Do not try to get access to the battery inserted in the hearing instrument. The battery must only be replaced by your hearing care professional.

Usage of hearing aids

Hearing aids should be used only as directed and adjusted by your hearing care professional. Misuse can result in sudden and permanent hearing loss.

Never allow others to wear your hearing aid, as incorrect usage could cause permanent damage to their hearing.

Choking hazards and risk of swallowing batteries or other small parts

Hearing aids, their parts and batteries should be kept out of reach of children and anyone who might swallow these items or otherwise cause injury to themselves.

If a battery, hearing aid or small part is swallowed, see a doctor immediately and contact the National Poison Center at 1-800-222-1222 or National Battery Ingestion Hotline at 1-800-498-8666.

Explosives

Your hearing aids are safe to use under normal usage conditions. The hearing aid has not been tested for compliance with international standards concerning explosive environments.

Therefore, do not use the hearing aid in environments with danger of explosions

e.g. mines, oxygen rich environments or areas where flammable anesthetics are handled.

Fatality hazards and risk of swallowing lithium-ion batteries or placing them in the ear or nose

Never swallow lithium-ion batteries nor place them in the ear or the nose as this may lead to serious injury or death in as little as two hours. This can be due to chemical burns, which can permanently damage the nose or ear or potentially lead to perforation of the inner organs. If a lithium-ion battery is swallowed or placed in the ear or nose, seek emergency medical treatment immediately. Keep the batteries in the original packaging until use. Dispose of used batteries immediately.

Continues on next page

General warnings

Rechargeable battery

Do not attempt to open the hearing aid, as it may damage the battery.

Never attempt to replace the battery. If the battery needs to be replaced, please return your device to the supplier. The service guarantee is void if there are signs of tampering.

In case of battery leakage do not wear or carry your hearing aid, as it may cause skin irritation due to acids leaking from the battery. If your skin has been in contact with the leaked battery acids, use a wet cloth to wipe it off and ensure no acid is left on your skin. If you experience skin irritation, consult your doctor. For further handling instructions for your hearing aid, consult your hearing care professional.

The safety of recharging batteries using a USB connector is determined by the external signal source. When connected to external equipment plugged into a

power socket, this equipment must comply with IEC 62368-1 or equivalent safety standards.

Dysfunction

Be aware of the possibility that your hearing aids may stop working without notice. Keep this in mind when you depend on warning sounds (e.g. when you are in traffic). The hearing aids may stop functioning, for instance, if the batteries have expired or if the tubing is blocked by moisture or earwax.

Active implants

The hearing aids have been thoroughly tested and characterized for human health according to international standards for human exposure (Specific Absorption Ratio - SAR), induced electromagnetic power and voltages into the human body.

The exposure values are well below internationally accepted safety limits for SAR, induced electromagnetic power and voltages into the human body defined in the standards for human health and coexistence with active medical implants such as pacemakers and heart defibrillators.

If you have an active brain implant, please contact the manufacturer of your implantable device for information about the risk of disturbance.

The Autophone magnet or MultiTool (which has a built-in magnet) should be kept more than 30 centimeters (1 foot) away from the implant, e.g. do not carry it in your breast pocket.

Follow the guidelines recommended by the manufacturers of implantable defibrillators and pacemakers regarding their use with magnets.

Cochlear implants

If you are using a cochlear implant (CI) on one ear and a hearing aid on the other ear, make sure to always keep your CI at least a 1 centimeter (0.4 inches) distance from your hearing aid. The magnetic field from CI sound processors, coils and magnets may permanently damage the speaker unit in your hearing aid. Never place the devices close together on a table e.g. when cleaning or changing batteries. Do not carry the CI and the hearing aid together in the same box.

Detached earpiece in ear canal

If the earpiece is not on the speaker when removed from the ear, the earpiece may still be in the ear canal. For further instructions, consult your hearing care professional.

Continues on next page

General warnings

X-ray/CT/MR/PET scanning, electrotherapy and surgery

Remove your hearing aid before X-ray examinations and CT/MR/PET scans, electrotherapy, surgery, etc. as your hearing aid may be damaged when exposed to strong electromagnetic fields.

Heat and chemicals

Your hearing aids must never be exposed to extreme heat, e.g. left inside a parked car in the sun.

The hearing aids must not be dried in microwave ovens or other ovens.

The chemicals in cosmetics, hairspray, perfume, aftershave lotion, sunscreen lotion, and insect repellent can damage the hearing aids. Always remove your hearing aids before applying such products and allow time to dry before use.

Connection to external equipment

The safety of the hearing aids when connected to external equipment with USB cable and/or directly is determined by the external signal source. When the hearing aids are connected to external equipment which is plugged into a power socket, this equipment must comply with IEC 62368-1 or equivalent safety standards.

Power hearing aid

Special care should be exercised in selecting, fitting, and using hearing aids where the maximum sound pressure capability exceeds 132 dB SPL as there may be a risk of impairing the remaining hearing of the hearing aid user.

For information on whether your instrument is a power hearing aid, see the model overview section in this booklet.

Possible side effects

Hearing aids, molds or domes may cause an accelerated accumulation of earwax.

The non-allergenic materials used in hearing aids may, in rare cases cause a skin irritation or other side effects.

If these conditions occur, seek consultation with a physician.

Use on aircraft

Your hearing aids have Bluetooth wireless technology. On board an aircraft, the hearing aids must be put into Flight mode to deactivate Bluetooth, unless Bluetooth is permitted by the flight personnel.

Use of third-party accessories

Only use accessories, transducers or cables supplied by the manufacturer. Non-original accessories may result in reduced electromagnetic compatibility (EMC) of your hearing aids.

Modification of hearing aids is not allowed

Changes or modifications not expressly approved by the manufacturer will void the warranty of the equipment.

Interference

The hearing aids have been thoroughly tested for interference according to the most stringent international standards, including EN/IEC 60601-1-2 and its amendments.

Electromagnetic interference may occur in the vicinity of equipment with the symbol to the left. Portable and mobile RF (radio frequency) communications equipment can affect the performance of your hearing aids. If your hearing aids are affected by electromagnetic interference, move away from the source to reduce the interference.

Troubleshooting

| Symptom | Possible causes |
|--------------------------------------|--|
| No sound | Hearing aid is out of power |
| | Dead battery |
| | Clogged earpieces (dome, Grip Tip, or mold) |
| | Hearing aid microphone muted |
| Intermittent or reduced sound | Clogged sound outlet |
| | Moisture |
| Squealing noise | Hearing aid earpiece incorrectly inserted |
| | Earwax accumulated in ear canal |
| Beeping | If your hearing aid plays eight beeps, four times consecutively, your hearing aid needs a microphone service check |
| Pairing issue with smartphone | Bluetooth connection failed |
| | Only one hearing aid is paired |

Solutions

Charge the hearing aid (**miniRITE T R only**) / Replace the battery (**miniRITE T only**)

Contact your hearing care professional (**miniRITE T R only**) / Replace the battery (**miniRITE T only**)

Clean mold

Replace wax filter, dome, or Grip Tip

Unmute the hearing aid microphone

Clean mold or replace wax filter, dome, or Grip Tip

Gently wipe the hearing aid and let it dry

Re-insert the earpiece

Have ear canal examined by your doctor

Contact your hearing care professional

1) Unpair your hearing aid

2) On your phone, turn Bluetooth OFF and ON again

3) Turn the hearing aid OFF and then turn it back ON

4) Pair your hearing aid again (for guidance, visit: <https://www.bernafon.us/support/pairing>)

Note

If none of the above solutions work, consult your hearing care professional.

Continues on next page

Troubleshooting

To troubleshoot the charger, see your charger's instructions for use.

| Symptom | Possible causes |
|---|--|
| The hearing aid LED light remains turned OFF when the hearing aid is placed in the charger | The charger is not turned ON |
| | The hearing aid or charger's temperature is either too warm or too cold |
| | Charging is incomplete. The charger has stopped charging to protect the battery. |
| | The hearing aid is incorrectly seated in the charger |
| The hearing aid LED light blinks GREEN when the hearing aid is placed in the charger | Hearing aid has not been in use for a prolonged period of time |
| The hearing aid LED light blinks ORANGE when the hearing aid is placed in the charger | System error |

Solutions

Verify that the charger's power plug is correctly connected or the power bank has enough battery

Move the charger and hearing aid to a location with a temperature between +5°C and +40°C (+41°F and +104°F)

Reinsert the hearing aid into the charger. This completes the charging within approximately 15 minutes.

Check the charging ports for foreign objects

Depending on how depleted the battery in the hearing aid is, the hearing aid automatically resumes normal charging mode after a timeframe of up to 10 minutes. Ensure you leave the hearing aids in the charger during this process.

Contact your hearing care professional

Note

If none of the above solutions work, consult your hearing care professional.

Water and dust resistant (IP68)

Your hearing aid is dust tight and protected against ingress of water, which means it is designed to be worn in all daily life situations. Therefore, you do not have to worry about humidity or getting wet in the rain. Should your hearing aid come into contact with water and stop working, please follow these guidelines.

miniRITE T R only

Before charging the hearing aid, make sure to wipe off any moisture.

miniRITE T only

Should your hearing aid come into contact with water and stop working, follow these guidelines:

1. Gently wipe off any water
2. Open the battery drawer, remove the battery, and gently wipe off any water in the battery drawer
3. Let the hearing aid dry with the battery drawer left open for approximately 30 minutes
4. Insert a new battery.

IMPORTANT NOTICE

Do not wear your hearing aid while showering or participating in water activities. Do not immerse your hearing aid in water or other liquids.

Operating conditions

(MNR T R only)

| | |
|--|--|
| Operating conditions | Temperature: +5°C to +40°C (41°F to 104°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa |
| Charging conditions | Temperature: +5°C to +40°C (41°F to 104°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa |
| Transportation and storage conditions | Temperature and humidity shall not exceed the below limits for extended periods during transportation and storage: Transportation: Temperature: -20°C to +60°C (-4°F to 140°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa Storage: Temperature: -20°C to +30°C (-4°F to 86°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa |

Note

For more information about the charger's operating conditions, see your charger's instructions for use.

Operating conditions

(MNR T only)

| | |
|--|---|
| Operating conditions | Temperature: +1°C to +40°C (34°F to 104°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa |
| Transportation and storage conditions | Temperature and humidity shall not exceed the below limits for extended periods during transportation and storage: Transportation: Temperature: -25°C to +60°C (-13°F to 140°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa Storage: Temperature: -25°C to +60°C (-13°F to 140°F) Humidity: 5% to 93% relative humidity, non-condensing Atmospheric pressure: 700 hPa to 1060 hPa |

Technical information

The hearing aid contains the following two radio technologies:

The hearing aid contains a radio transceiver using short range magnetic induction technology operating at 3.84 MHz. The magnetic field strength of the transmitter is very weak and always below 15 nW (typically below $-40 \text{ dB}\mu\text{A}/\text{m}$ ($-12.20 \text{ dB}\mu\text{A}/\text{ft}$) at 10 meters (33 feet) distance).

The hearing aid also contains a radio transceiver using Bluetooth Low Energy technology and a proprietary short-range radio technology, both operating at ISM band 2.4 GHz.

The radio transmitter is weak and always below 9 mW equal to 9.6 dBm in total radiated power.

Only use your hearing aids in areas where wireless transmission is permitted.

The hearing aid complies with international standards concerning radio transmitters, electromagnetic compatibility, and human exposure.

Due to the limited space available on the hearing aid, relevant approval markings can be found in this booklet. Additional information can be found in the Product Information Sheet on www.bernafon.com

MNR T R only

This device contains a radio module with the following certification ID numbers: FCC ID: ZACAHAU5MRTRC

miniRITE T only

This device contains a radio module with the following certification ID numbers: FCC ID: ZACAHAU5MNRT

Radiofrequency radiation exposure information

This device complies with FCC RF exposure limits set forth for an uncontrolled environment and has been tested for portable use.

The device must not be co-located or used in conjunction with any other antenna or transmitter.

Use of other accessories not verified by the manufacturer may not ensure compliance with FCC RF exposure guidelines.

Note: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the manufacturer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cell phone

Some hearing aid users have reported a buzzing sound in their hearing aid when using cell phones, indicating that the cell phone and hearing aid may not be compatible.

The ANSI C63.19 standard determines the prediction of compatibility between a specific hearing aid and a cell phone, thus hearing aid compliance is tested according to this standard. However, demonstrating compliance according to this standard cannot guarantee that all users will be satisfied.

Whereas all hearing aids have acoustic coupling, only the larger hearing aids have the physical space for telecoil (inductive) coupling.

The hearing aid is compliant with ANSI C63.19 in both microphone and telecoil mode.

IMPORTANT NOTICE

The performance of an individual hearing aid may vary with individual cell phones. Therefore, ensure you try this hearing aid with your cell phone or, if you are purchasing a new phone, be sure to try it with your hearing aid prior to purchase. For additional guidance, please ask your cell phone provider for the booklet entitled "Hearing Aid Compatibility with Digital Wireless Cell Phones".

The manufacturer declares that this hearing aid is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

This medical device complies with Medical Device Regulation (EU) 2017/745.

Declaration of Conformity is available from the company headquarters.

Bernafon
Kongebakken 9
DK-2765 Smorum
Denmark
www.bernafon.com/doc

Should your hearing aid require service or replacement, contact your hearing care professional for assistance. Many repair needs can be handled on-site at your local hearing care professional's office, and they will arrange for service with the manufacturer if required. You can also contact us at: 580 Howard Ave., Somerset, NJ 08873.

CE 0123



SBO Hearing A/S
Kongebakken 9
DK-2765 Smørum
Denmark



Waste from electronic equipment must be handled according to local regulations.



 **Bluetooth®**

IP68

Description of symbols and abbreviations used in this booklet



Warnings

Text marked with a warning symbol must be read before using the device.



Manufacturer

The device is produced by the manufacturer whose name and address are stated next to the symbol. Indicates the medical device manufacturer, as defined in EU Regulations 2017/745.



CE mark

The device complies with all required EU regulations and directives. The four digit number indicates the identification of the notified body.



Electronic waste (WEEE)

Recycle hearing aids, accessories or batteries according to local regulations. Hearing aid users can also return electronic waste to their hearing care professional for disposal. Electronic equipment covered by Directive 2012/19/EU on waste and electrical equipment (WEEE).



Regulatory Compliance Mark (RCM)

The device complies with electrical safety, EMC and radio spectrum requirements for devices supplied to the Australian or New Zealand markets.

IP68

IP code

Indicates the class of protections against harmful ingress of water and particulate matter according to EN 60529. IP6X indicates total dust protection. IPX8 indicates the protection against the effects of continuous immersion in water.



Bluetooth logo

Registered trademark of Bluetooth SIG, Inc. where any use of such requires a license.

Description of symbols and abbreviations used in this booklet



Made for Apple badges

Indicates that the device is compatible with iPhone, iPad and iPod touch.



Android badge

Indicates that the device is compatible with Android.



Hearing loop

This logo incorporates the universal symbol for hearing assistance. The "T" signifies that a hearing loop is installed.



Radio Frequency (RF) transmitter

Your hearing aid contains an RF transmitter.

GTIN

Global Trade Item Number

A globally unique 14-digit number used to identify medical device products including medical device software. GTIN in this booklet is related to medical device firmware (FW). GTIN on regulatory packaging label is related to medical device hardware.

FW

FW

Firmware version used in the device.

Description of additional symbols used on labels



Keep dry

Indicates a medical device that needs to be protected from moisture.



Catalog number

Indicates the manufacturer's catalog number so that the medical device can be identified.



Serial number

Indicates the manufacturer's serial number so that a specific medical device can be identified.



Medical Device

The device is a medical device.



Li-ion

Battery recycling symbol

Li-ion battery recycling symbol.



Temperature limit

Indicates the temperature limits to which the medical device can be safely exposed.



Humidity limitation

Indicates the range of humidity to which the medical device can be safely exposed.



Radio Frequency Identification

Indicates the presence of a passive radio-frequency identification tag incorporated into the device for manufacturing and service purposes.



Unique device identifier

Indicates a carrier that contains unique device identifier information

International warranty

Your device is covered by an international warranty issued by the manufacturer. This international warranty covers manufacturing and material defects in the device itself, but not in accessories such as batteries, tubing, speakers, earpieces and filters, etc. Problems arising from improper/incorrect handling or care, excessive use, accidents, repairs made by an unauthorized party, exposure to corrosive conditions, physical changes in your ear, damage due to foreign objects entering the device, or incorrect adjustments are NOT covered by the international warranty and may void it. The above international warranty does not affect any legal rights that you might have under applicable national legislation governing the sale of

consumer goods in the country where you have bought your device. Your hearing care professional may also have issued a warranty that goes beyond the clauses of this international warranty. Please consult him/her for further information.

If you need service

Take your device to your hearing care professional, who may be able to sort out minor problems and adjustments immediately. Your hearing care professional may charge a fee for their services.

Warranty

Certificate

Name of owner: _____

Hearing care professional: _____

Hearing care professional's address: _____

Hearing care professional's phone: _____

Purchase date: _____

Warranty period: _____ Month: _____

Model left: _____ Serial no.: _____

Model right: _____ Serial no.: _____

Your individual hearing aid settings

To be filled out by your hearing care professional.

| Tinnitus SoundSupport: Limitation on use | | | |
|--|----------------------|----------------------------|-------------------------|
| <input type="checkbox"/> | No limitation on use | | |
| | Program | Start-up volume (Tinnitus) | Max volume (Tinnitus) |
| <input type="checkbox"/> | 1 | Max _____ hours per day | Max _____ hours per day |
| <input type="checkbox"/> | 2 | Max _____ hours per day | Max _____ hours per day |
| <input type="checkbox"/> | 3 | Max _____ hours per day | Max _____ hours per day |
| <input type="checkbox"/> | 4 | Max _____ hours per day | Max _____ hours per day |

Tinnitus SoundSupport settings overview for your hearing aid

| Left | | | Right | |
|------------------------------|-----------------------------|-----------------------|------------------------------|-----------------------------|
| <input type="checkbox"/> Yes | <input type="checkbox"/> No | Tinnitus SoundSupport | <input type="checkbox"/> Yes | <input type="checkbox"/> No |

A) How to adjust Tinnitus SoundSupport volume in each ear separately
To **increase** or **decrease** the volume (on one hearing aid only), briefly press on the upper or lower part of the push-button repeatedly until you reach your desired level.

B) How to adjust Tinnitus SoundSupport volume in both ears simultaneously

You can use one hearing aid to increase/decrease the sound in both hearing aids. When adjust the volume in one hearing aid, the volume on the other hearing aid follows.

To **increase** volume, briefly press on the upper part of the push-button repeatedly.

To **decrease** volume, briefly press on the lower part of the push-button repeatedly.

To be filled out by your hearing care professional.

General settings overview for your hearing aid





| Left | | | Right | |
|--------------------------------------|------------------------------|----------------------------|--------------------------------------|------------------------------|
| <input type="checkbox"/> Yes | <input type="checkbox"/> No | | <input type="checkbox"/> Yes | <input type="checkbox"/> No |
| <input type="checkbox"/> Short press | | Change program | <input type="checkbox"/> Short press | |
| <input type="checkbox"/> Long press | | | <input type="checkbox"/> Long press | |
| <input type="checkbox"/> Yes | <input type="checkbox"/> No | Adjust volume | <input type="checkbox"/> Yes | <input type="checkbox"/> No |
| <input type="checkbox"/> Yes | <input type="checkbox"/> No | Mute (MNR T only) | <input type="checkbox"/> Yes | <input type="checkbox"/> No |
| Volume control indicators | | | | |
| <input type="checkbox"/> On | <input type="checkbox"/> Off | Beeps at min/max volume | <input type="checkbox"/> On | <input type="checkbox"/> Off |
| <input type="checkbox"/> On | <input type="checkbox"/> Off | Beeps when changing volume | <input type="checkbox"/> On | <input type="checkbox"/> Off |
| <input type="checkbox"/> On | <input type="checkbox"/> Off | Beeps at start-up volume | <input type="checkbox"/> On | <input type="checkbox"/> Off |
| Battery indicators | | | | |
| <input type="checkbox"/> On | <input type="checkbox"/> Off | Low battery warning | <input type="checkbox"/> On | <input type="checkbox"/> Off |

To be filled out by your hearing care professional.

Sound and LED light indicators

Different sounds and light patterns indicate the hearing aid status. The different indicators are listed on the following pages. For light indicators on your charger, see the charger's instructions for use.

 
 
 

 




Your hearing care professional can set sound and LED light indicators to match your preferences.

| Program | <input type="checkbox"/> Sound | <input type="checkbox"/> LED light* | When to use |
|---------|--------------------------------|---|-------------|
| 1 | 1 tone |  | |
| 2 | 2 tones |  | |
| 3 | 3 tones |  | |
| 4 | 4 tones |  | |








 Short GREEN blink

*LED light blinks continuously or is repeated three times with short pauses.

Continues on next page

| ON/OFF | Sound | LED light | LED light comments |
|------------------------|---|--|------------------------------------|
| ON | <input type="checkbox"/> Jingle | <input type="checkbox"/>    | Shown once |
| OFF | <input type="checkbox"/> 4 descending tones | <input type="checkbox"/>  | |
| Volume | Sound | LED light | |
| Start-up volume | <input type="checkbox"/> 2 beeps | <input type="checkbox"/>  | |
| Minimum/maximum volume | <input type="checkbox"/> 3 beeps | <input type="checkbox"/>  | |
| Volume up/down | <input type="checkbox"/> 1 beep | <input type="checkbox"/>  | |
| Mute | | <input type="checkbox"/>   | Continuous or repeated three times |



 Long GREEN blink
  Short GREEN blink
  Long ORANGE blink
  Short ORANGE blink

| Accessories | <input type="checkbox"/> Sound | <input type="checkbox"/> LED light | LED light comments |
|---|--------------------------------------|---|---|
| TV-A | 2 different tones |  | Continuous or repeated three times |
| EduMic | 2 different tones |  | |
| SoundClip-A | 2 different tones |  | |
| Flight mode | <input type="checkbox"/> Sound | <input type="checkbox"/> LED light | |
| Flight mode activated (miniRITE T R only) | 4 descending tones + short jingle |  | |
| Flight mode deactivated (miniRITE T R only) | 4 descending tones + short jingle |  | Only available when three-time repetition is selected |
| Flight mode activated (miniRITE T only) | Short jingle |  | Continuous or repeated three times |
| Flight mode deactivated (miniRITE T only) | Short jingle |  | Only available when three-time repetition is selected |

 Long GREEN blink
  Short GREEN blink
  Long ORANGE blink
  Short ORANGE blink

Continues on next page

| Warnings | Sound | LED light | LED light comments |
|--|--|--|--|
| Low battery | <input type="checkbox"/> 3 alternate tones | <input type="checkbox"/> ● ● ● ● ● ● ● ● | Continuously blinking |
| | <input type="checkbox"/> Spoken Indicators | | |
| Battery shut down | 4 descending tones | | |
| Microphone service check needed | 8 beeps repeated 4 times | <input type="checkbox"/> ■ ■ ■ ■ | Repeated four times |
| The hearing aid LED light does not turn ON when the hearing aid is placed in the charger | | Turned OFF | See the Troubleshooting section |

| Warnings | Sound | LED light | LED light comments |
|---|-------|---|--|
| The hearing aid LED light blinks ORANGE when the hearing aid is placed in the charger (miniRITE T R only) | |  | Continuously blinking. See the Troubleshooting section. |
| The hearing aid LED light blinks GREEN when the hearing aid is placed in the charger (miniRITE T R only) | |  | Continuously blinking. See the Troubleshooting section. |

 Long GREEN blink
  Short GREEN blink
  Long ORANGE blink
  Short ORANGE blink

Summary of relevant studies

Clinical evaluations conducted by or for the manufacturer provide evidence to support the intended use and clinical benefits outlined in the IFU and demonstrate regulatory conformity. Clinical data is collected, assessed, and analyzed to support the performance of the hearing aids by validating that they provide sufficient audibility and hearing loss compensation based on best-practice prescriptive fitting rationales. The clinical data also demonstrate improved speech understanding and success with hearing aids using validated questionnaires and surveys.

Non-clinical data supporting the overall performance of the hearing aids includes software verification, electroacoustic verification, electrical and mechanical safety evaluation, electromagnetic compatibility (EMC) evaluation, and documentation of radio properties and performance. Additional information can be found in section Technical Information.

Technical Data

MNRTR **60**

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Lithium-ion

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 106 dB SPL | 106 dB SPL |
| | HF Average | 103 dB SPL | 103 dB SPL |
| Full-on Gain | Peak | 36 dB | 36 dB |
| | HF Average | 30 dB | 30 dB |
| Reference Test Gain | | 26 dB | 26 dB |
| Frequency Range | | 100-9400 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 83/83 dB SPL | 83/83 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 17/28 dB SPL | 17/29 dB SPL |
| Attack Time | | 5 ms | 5 ms |
| Release Time | | 18 ms | 21 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------|----------------------------|------------------------------------|
| Expected operating time* | Hours | 24 hrs | 24 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 59 dB SPL | 58 dB SPL |
| | Measured output at 10 mA/m | 75 dB SPL | 75 dB SPL |
| | Measured output at 31.6 mA/m | 85 dB SPL | 85 dB SPL |

*Expected operating time for rechargeable battery depends on use pattern, active feature set, hearing loss, sound environment, battery age and use of wireless accessories.

Technical Data

MNR TR **85**

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Lithium-ion

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 117 dB SPL | 117 dB SPL |
| | HF Average | 114 dB SPL | 114 dB SPL |
| Full-on Gain | Peak | 55 dB | 55 dB |
| | HF Average | 48 dB | 48 dB |
| Reference Test Gain | | 37 dB | 37 dB |
| Frequency Range | | 100-8900 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 94/94 dB SPL | 94/94 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 18/28 dB SPL | 18/27 dB SPL |
| Attack Time | | 5 ms | 5 ms |
| Release Time | | 18 ms | 18 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------|--------------------------------|--|
| Expected operating time* | Hours | 24 hrs | 24 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 76 dB SPL | 77 dB SPL |
| | Measured output at 10 mA/m | 93 dB SPL | 94 dB SPL |
| | Measured output at 31.6 mA/m | 104 dB SPL | 104 dB SPL |

*Expected operating time for rechargeable battery depends on use pattern, active feature set, hearing loss, sound environment, battery age and use of wireless accessories.

Technical Data

MNRTR 100

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Lithium-ion

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 124 dB SPL | 124 dB SPL |
| | HF Average | 120 dB SPL | 120 dB SPL |
| Full-on Gain | Peak | 57 dB | 57 dB |
| | HF Average | 53 dB | 53 dB |
| Reference Test Gain | | 42 dB | 42 dB |
| Frequency Range | | 100-7500 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 100/100 dB SPL | 100/100 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 16/28 dB SPL | 17/29 dB SPL |
| Attack Time | | 4 ms | 3 ms |
| Release Time | | 7 ms | 8 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|---------------------------------|--------------------------------|--|
| Expected operating time* | Hours | 24 hrs | 24 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 86 dB SPL | 86 dB SPL |
| | Measured output at 10 mA/m | 103 dB SPL | 103 dB SPL |
| | Measured output at 31.6 mA/m | 113 dB SPL | 113 dB SPL |

*Expected operating time for rechargeable battery depends on use pattern, active feature set, hearing loss, sound environment, battery age and use of wireless accessories.

Technical Data

MNRTR 105

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Lithium-ion

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 127 dB SPL | 127 dB SPL |
| | HF Average | 123 dB SPL | 123 dB SPL |
| Full-on Gain | Peak | 64 dB | 64 dB |
| | HF Average | 58 dB | 58 dB |
| Reference Test Gain | | 47 dB | 47 dB |
| Frequency Range | | 100-7900 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 105/105 dB SPL | 104/104 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 16/28 dB SPL | 16/28 dB SPL |
| Attack Time | | 4 ms | 4 ms |
| Release Time | | 14 ms | 15 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|---------------------------------|--------------------------------|--|
| Expected operating time* | Hours | 24 hrs | 24 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 89 dB SPL | 89 dB SPL |
| | Measured output at 10 mA/m | 106 dB SPL | 106 dB SPL |
| | Measured output at 31.6 mA/m | 116 dB SPL | 116 dB SPL |

*Expected operating time for rechargeable battery depends on use pattern, active feature set, hearing loss, sound environment, battery age and use of wireless accessories.

Technical Data

MNR T 60

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Zinc-Air

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 105 dB SPL | 105 dB SPL |
| | HF Average | 103 dB SPL | 103 dB SPL |
| Full-on Gain | Peak | 36 dB | 36 dB |
| | HF Average | 30 dB | 30 dB |
| Reference Test Gain | | 26 dB | 26 dB |
| Frequency Range | | 100-9400 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 85/85 dB SPL | 85/85 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 16/27 dB SPL | 16/27 dB SPL |
| Attack Time | | 5 ms | 5 ms |
| Release Time | | 32 ms | 30 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|---|---------------------------------|--------------------------------|--|
| Battery Consumption* | Typical | 2.2 mA | 2.2 mA |
| | Quiescent | 2.2 mA | 2.2 mA |
| Expected Battery Life (battery size 312 - IEC PR41)** | Hours | 55-60 hrs | 55-60 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 58 dB SPL | 58 dB SPL |
| | Measured output at 10 mA/m | 75 dB SPL | 75 dB SPL |
| | Measured output at 31.6 mA/m | 86 dB SPL | 86 dB SPL |

*Battery current is measured according to IEC 60118-0:1983/AMD1:1994 §7.11, IEC 60118-0:2015 §7.7 and ANSI S3.22:2014 §6.13 after a settling time of minimum 3 minutes.

**Real usage battery life is shown as an estimated interval based on mixed use cases with variable amplification settings and variable input levels, incl. direct stereo streaming from a TV (25% of the time) and streaming from a cell phone (6% of the time).

Technical Data

MNR T 85

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Zinc-Air

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 117 dB SPL | 117 dB SPL |
| | HF Average | 114 dB SPL | 114 dB SPL |
| Full-on Gain | Peak | 55 dB | 55 dB |
| | HF Average | 48 dB | 48 dB |
| Reference Test Gain | | 37 dB | 37 dB |
| Frequency Range | | 100-8900 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 96/96 dB SPL | 96/96 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 17/27 dB SPL | 17/27 dB SPL |
| Attack Time | | 5 ms | 5 ms |
| Release Time | | 30 ms | 33 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|---|---------------------------------|--------------------------------|--|
| | | Battery Consumption* | Typical |
| | Quiescent | 2.2 mA | 2.2 mA |
| Expected Battery Life (battery size 312 - IEC PR41)** | Hours | 50-60 hrs | 50-60 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 76 dB SPL | 77 dB SPL |
| | Measured output at 10 mA/m | 94 dB SPL | 94 dB SPL |
| | Measured output at 31.6 mA/m | 104 dB SPL | 104 dB SPL |

*Battery current is measured according to IEC 60118-0:1983/AMD1:1994 §7.11, IEC 60118-0:2015 §7.7 and ANSI S3.22:2014 §6.13 after a settling time of minimum 3 minutes.

**Real usage battery life is shown as an estimated interval based on mixed use cases with variable amplification settings and variable input levels, incl. direct stereo streaming from a TV (25% of the time) and streaming from a cell phone (6% of the time).

Technical Data

MNR T 100

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Zinc-Air

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 123 dB SPL | 123 dB SPL |
| | HF Average | 119 dB SPL | 119 dB SPL |
| Full-on Gain | Peak | 57 dB | 57 dB |
| | HF Average | 53 dB | 53 dB |
| Reference Test Gain | | 42 dB | 42 dB |
| Frequency Range | | 100-7500 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 101/101 dB SPL | 101/101 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 16/28 dB SPL | 16/28 dB SPL |
| Attack Time | | 8 ms | 9 ms |
| Release Time | | 15 ms | 16 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|---|---------------------------------|--------------------------------|--|
| Battery Consumption* | Typical | 2.4 mA | 2.3 mA |
| | Quiescent | 2.2 mA | 2.2 mA |
| Expected Battery Life (battery size 312 - IEC PR41)** | Hours | 50-60 hrs | 50-60 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 85 dB SPL | 85 dB SPL |
| | Measured output at 10 mA/m | 103 dB SPL | 103 dB SPL |
| | Measured output at 31.6 mA/m | 113 dB SPL | 113 dB SPL |

*Battery current is measured according to IEC 60118-0:1983/AMD1:1994 §7.11, IEC 60118-0:2015 §7.7 and ANSI S3.22:2014 §6.13 after a settling time of minimum 3 minutes.

**Real usage battery life is shown as an estimated interval based on mixed use cases with variable amplification settings and variable input levels, incl. direct stereo streaming from a TV (25% of the time) and streaming from a cell phone (6% of the time).

Technical Data

MNR T 105

Measured according to American National Standard ANSI S3.22-2014, IEC 60118-0:2015 and IEC 60318-5:2006

Supply voltage: Zinc-Air

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|--|------------------------------------|----------------------------|------------------------------------|
| OSPL90 | Peak | 127 dB SPL | 127 dB SPL |
| | HF Average | 123 dB SPL | 123 dB SPL |
| Full-on Gain | Peak | 64 dB | 64 dB |
| | HF Average | 58 dB | 58 dB |
| Reference Test Gain | | 47 dB | 47 dB |
| Frequency Range | | 100-7900 Hz | 100-7500 Hz |
| Telecoil output | HF Average SPLITS (left/right ear) | 106/106 dB SPL | 106/106 dB SPL |
| Total Harmonic Distortion | 500 Hz | < 2 % | < 2 % |
| | 800 Hz | < 2 % | < 2 % |
| | 1600 Hz | < 2 % | < 2 % |
| Equivalent Input Noise Level | (omni/dir) | 16/27 dB SPL | 16/27 dB SPL |
| Attack Time | | 4 ms | 5 ms |
| Release Time | | 24 ms | 24 ms |

| 0 dB SPL ref. 20 μPa | | Bernafon Alpha XT 9 | Bernafon Alpha XT 7 & 5 |
|---|---------------------------------|--------------------------------|--|
| | | Battery Consumption* | Typical |
| | Quiescent | 2.2 mA | 2.2 mA |
| Expected Battery Life (battery size 312 - IEC PR41)** | Hours | 50-60 hrs | 50-60 hrs |
| Latency | | 8.2 ms | 8.2 ms |
| Maximum Induction Coil Sensitivity | Measured output at 1 mA/m | 87 dB SPL | 88 dB SPL |
| | Measured output at 10 mA/m | 106 dB SPL | 106 dB SPL |
| | Measured output at 31.6 mA/m | 116 dB SPL | 116 dB SPL |

*Battery current is measured according to IEC 60118-0:1983/AMD1:1994 §7.11, IEC 60118-0:2015 §7.7 and ANSI S3.22:2014 §6.13 after a settling time of minimum 3 minutes.



**Real usage battery life is shown as an estimated interval based on mixed use cases with variable amplification settings and variable input levels, incl. direct stereo streaming from a TV (25% of the time) and streaming from a cell phone (6% of the time).

Bernafon Alpha XT 9

Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level



Input: 90 dB SPL
 Technical setting: A0

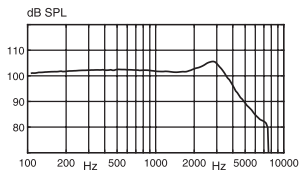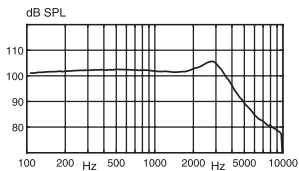

Frequency Response



Input:
 60 dB SPL (Acoustic)
 31.6 mA/m (Magnetic)
 Technical setting: N0

— Acoustic input
 - - - Magnetic input

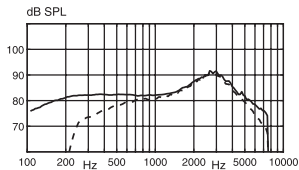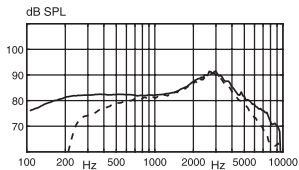

Input-Output



Technical Setting: N0

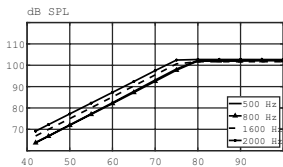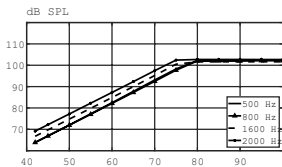

Bernafon Alpha XT 9



Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level
 Input: 90 dB SPL
 Technical setting: A0

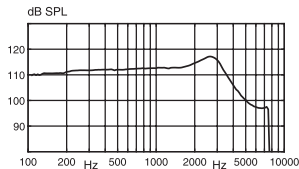
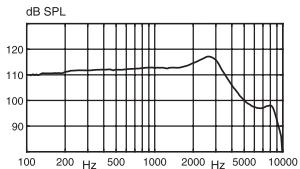


Frequency Response
 Input:
 60 dB SPL (Acoustic)
 31.6 mA/m (Magnetic)
 Technical setting: N0

— Acoustic input
 - - - Magnetic input

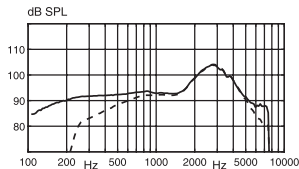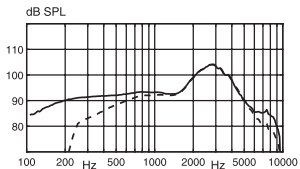

Input-Output
 Technical Setting: N0

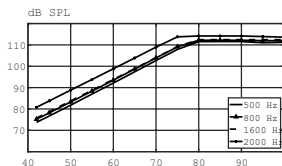
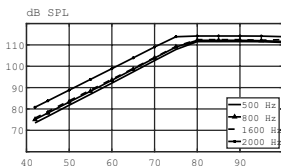


Bernafon Alpha XT 9

Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level



Input: 90 dB SPL
Technical setting: A0

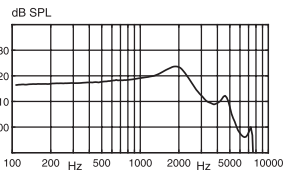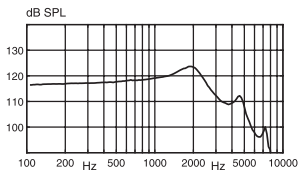

Frequency Response



Input:
60 dB SPL (Acoustic)
31.6 mA/m (Magnetic)
Technical setting: N0

— Acoustic input
- - - Magnetic input

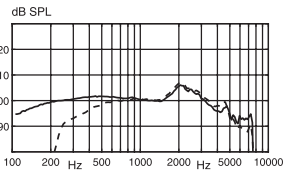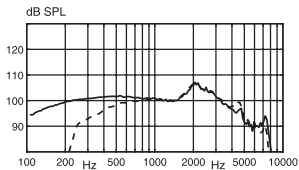

Input-Output



Technical Setting: N0

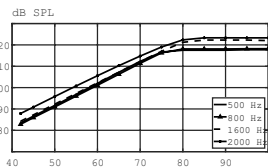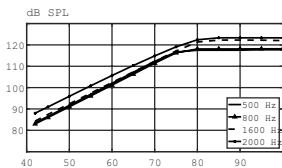

Bernafon Alpha XT 9



Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level
 Input: 90 dB SPL
 Technical setting: A0

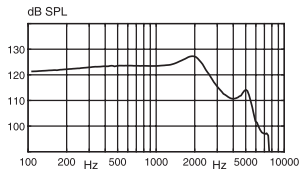
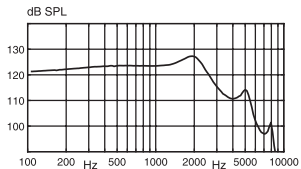


Frequency Response
 Input:
 60 dB SPL (Acoustic)
 31.6 mA/m (Magnetic)
 Technical setting: N0

— Acoustic input
 - - - Magnetic input

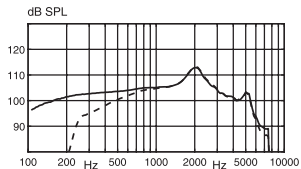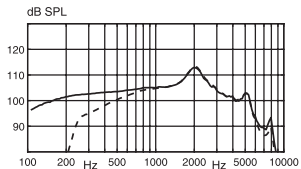



Input-Output
 Technical Setting: N0

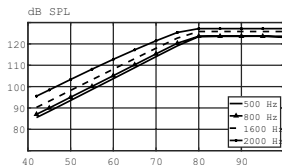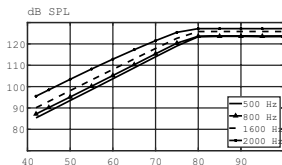

Bernafon Alpha XT 9



Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level
 Input: 90 dB SPL
 Technical setting: A0

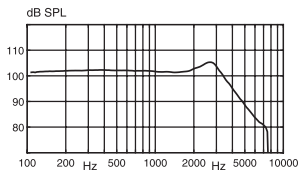
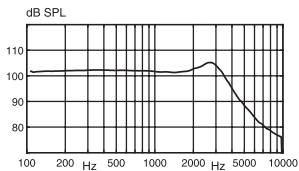


Frequency Response
 Input:
 60 dB SPL (Acoustic)
 31.6 mA/m (Magnetic)
 Technical setting: N0

— Acoustic input
 - - - Magnetic input

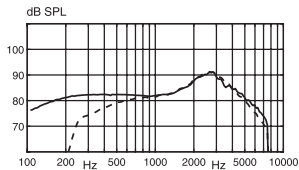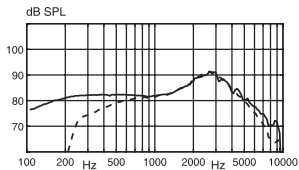



Input-Output
 Technical Setting: N0

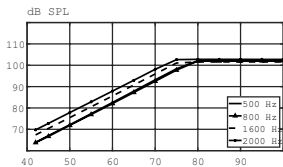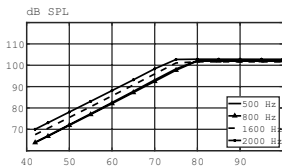

Bernafon Alpha XT 9



Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level
 Input: 90 dB SPL
 Technical setting: A0

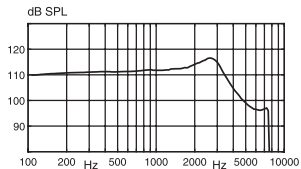
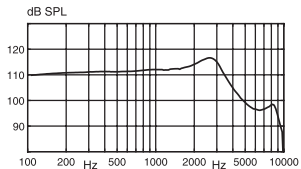


Frequency Response
 Input:
 60 dB SPL (Acoustic)
 31.6 mA/m (Magnetic)
 Technical setting: N0

— Acoustic input
 - - - Magnetic input

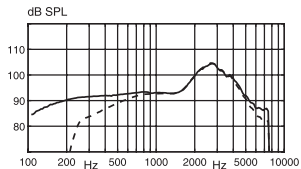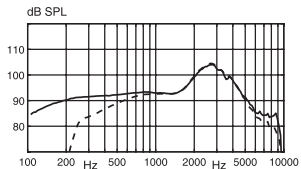

Input-Output
 Technical Setting: N0

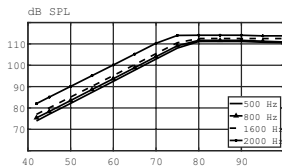
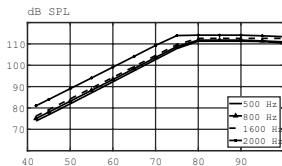


Bernafon Alpha XT 9

Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level



Input: 90 dB SPL
Technical setting: A0

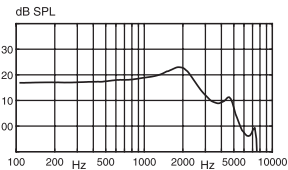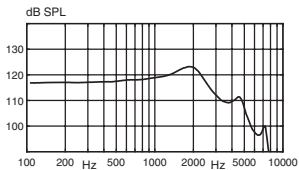

Frequency Response



Input:
60 dB SPL (Acoustic)
31.6 mA/m (Magnetic)
Technical setting: N0

— Acoustic input
- - - Magnetic input

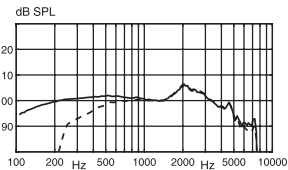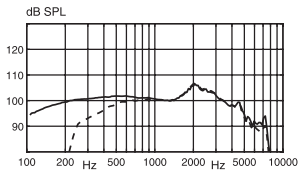

Input-Output



Technical Setting: N0

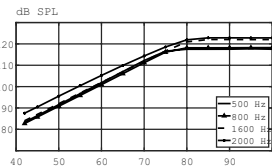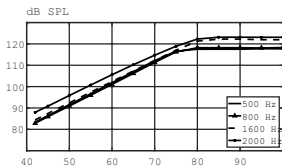

Bernafon Alpha XT 9



Bernafon Alpha XT 7 & 5

OSPL90 - Output Sound Pressure Level
 Input: 90 dB SPL
 Technical setting: A0

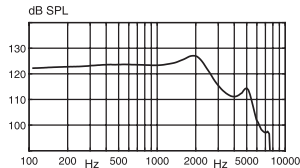
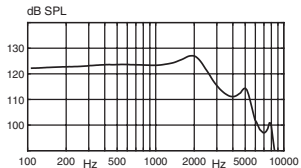


Frequency Response
 Input:
 60 dB SPL (Acoustic)
 31.6 mA/m (Magnetic)
 Technical setting: N0

— Acoustic input
 - - - Magnetic input

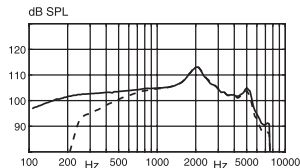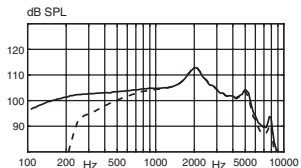

Input-Output
 Technical Setting: N0

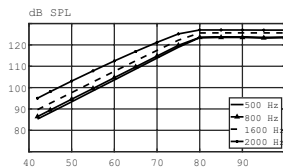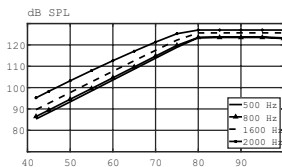





0000281357000001



281357US / 2024.08.20 / v1